


LCA 331


#1202A IS

# FITTING INSTRUCTIONS

<b>Vehicle</b>	Nissan 300ZX (Z32), 200SX, 240SX, Sylvania, Skyline R32 & R33.
<b>Subject</b>	Kit #1202AK – Caster Adjuster Bush Kit.
<b>Tools Required</b>	Garage Jack, 2 Floor Stand, 14mm, 19mm Sockets & Ratchet, 19mm Ring Spanner, 19mm Impact Socket & Impact Gun.
<b>Time Required</b>	1 Hr plus Wheel Alignment

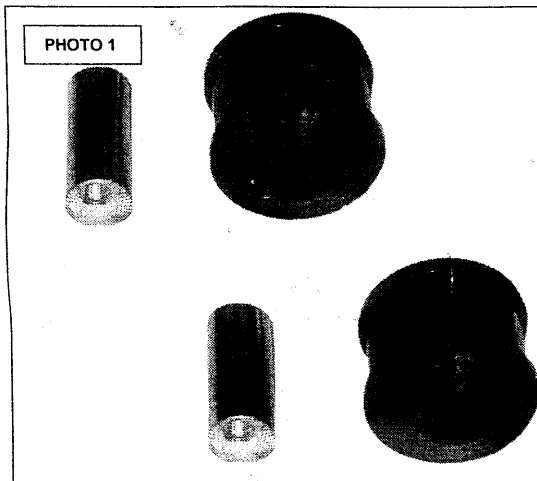

**Photo 1** – Check kit for contents  
2 x Replacement bushes.  
2 x Replacement tubes with offset holes.

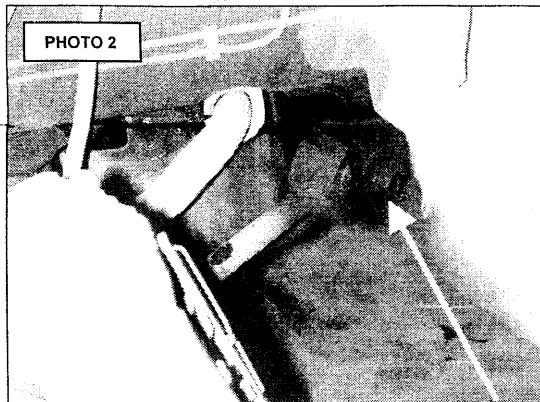

**Photo 2** – Jack the vehicle and place on floor stands or raise on a two post hoist. Remove the radius rod by first undoing the two radius rod to lower control arm bolts. Next remove the radius rod to chassis mount bolt and withdraw the radius rod.

**Photo 3** – Press the radius rod bush out of the arm and lubricate all contact surfaces with the grease provided. Press in the new bush and after deciding to increase or decrease the amount of caster, press in the eccentric tube. If an increase in caster is required, press the tube in as per photo 3.

Reassemble the radius rod in the reverse order of removal.

Repeat the procedure for the opposite side .

Wheel align the vehicle.  
Preferred Caster - + 8 deg. (300ZX)  
Available adjustment - +/- ½deg.

